

Oil-injected Screw Air Compressor Parameters

Model	Power		Work Pressure	Air Delivery (m ³ /min)	Libricating Oil	Start Mode	Dimension			Weight (Kg)	Output Diameter
	Kw	Hp					L	W	H		
ET8A	7.5	10	0.8Mpa	1.1	4L	Y-Δstart	880	67	88	240	R1/2
			1.0Mpa	0.95							
			1.2Mpa	0.8							
			1.5Mpa	0.5							
ET11A	11	15	0.8Mpa	1.5	8L	Y-Δstart	108	75	100	400	R3/4
			1.0Mpa	1.3							
			1.2Mpa	1.1							
			1.5Mpa	0.85							
ET15A	15	20	0.8Mpa	2.3	8L	Y-Δstart	108	75	100	400	R3/4
			1.0Mpa	2.1							
			1.2Mpa	1.72							
			1.5Mpa	1.35							
ET18A	18	25	0.8Mpa	3.0	12L	Y-Δstart	128	85	116	550	R1
			1.0Mpa	2.7							
			1.2Mpa	2.4							
			1.5Mpa	1.6							
ET22A	22	30	0.8Mpa	3.6	12L	Y-Δstart	128	85	116	550	R1
			1.0Mpa	3.2							
			1.2Mpa	2.7							
			1.5Mpa	1.8							
ET30A	30	40	0.8Mpa	5.0	20L	Y-Δstart	128	85	116	600	R1_1/2
			1.0Mpa	4.5							
			1.2Mpa	4.0							
			1.5Mpa	2.8							
ET37A	37	50	0.8Mpa	6.2	20L	Y-Δstart	140	100	129	800	R1_1/2
			1.0Mpa	5.6							
			1.2Mpa	5.0							
			1.5Mpa	3.5							
ET45A	45	60	0.8Mpa	7.0	20L	Y-Δstart	140	100	129	800	R1_1/2
			1.0Mpa	6.2							
			1.2Mpa	5.6							
			1.5Mpa	5.0							
ET55A	55	75	0.8Mpa	9.6	45L	Y-Δstart	168	112	144	1480	R2
			1.0Mpa	8.5							
			1.2Mpa	7.6							
			1.5Mpa	6.0							

Permanent Magnet VSD Screw Compressor

Model	Power		Work Pressure	Air Delivery (m ³ /min)	Libricating Oil	Start Mode	Dimenssion			Weight (Kg)	Output Diameter
	Kw	Hp					L	W	H		
ETV8A	7.5	10	0.8Mpa	1.1	4L	Frequency Conversion Start	88	67	88	200	R1/2
			1.0Mpa	0.95							
			1.2Mpa	0.8							
			1.5Mpa	0.5							
ETV11A	11	15	0.8Mpa	1.5	8L	Frequency Conversion Start	98	75	100	350	R3/4
			1.0Mpa	1.3							
			1.2Mpa	1.1							
			1.5Mpa	0.85							
ETV15A	15	20	0.8Mpa	2.3	8L	Frequency Conversion Start	98	75	100	350	R3/4
			1.0Mpa	2.1							
			1.2Mpa	1.72							
			1.5Mpa	1.35							
ETV18A	18	25	0.8Mpa	3.0	12L	Frequency Conversion Start	112	85	116	500	R1
			1.0Mpa	2.7							
			1.2Mpa	2.4							
			1.5Mpa	1.6							
ETV22A	22	30	0.8Mpa	3.6	12L	Frequency Conversion Start	112	85	116	500	R1
			1.0Mpa	3.2							
			1.2Mpa	2.7							
			1.5Mpa	1.8							
ETV30A	30	40	0.8Mpa	5.0	20L	Frequency Conversion Start	112	85	116	750	R1_1/2
			1.0Mpa	4.5							
			1.2Mpa	4.0							
			1.5Mpa	2.8							
ETV37A	37	50	0.8Mpa	6.2	20L	Frequency Conversion Start	128	100	129	750	R1_1/2
			1.0Mpa	5.6							
			1.2Mpa	5.0							
			1.5Mpa	3.5							
ETV45A	45	60	0.8Mpa	7.0	20L	Frequency Conversion Start	128	100	129	750	R1_1/2
			1.0Mpa	6.2							
			1.2Mpa	5.6							
			1.5Mpa	5.0							